



pietranera®

arredamenti e attrezzature per parrucchieri

PIETRANERA spa Via Masaccio n° 2 Z.I Mancasale 42100 Reggio Emilia Italy

Tel 0522-516510 Fax 0522-514669 P.I. 01169000351

Replacement of chair of 504M SESTO SENSO




Remove the rear metal cover.



Remove the black plastic cover, keeping the basin completely tilted backwards.



Undo the 2 self-tapping screws that fix the backrest.

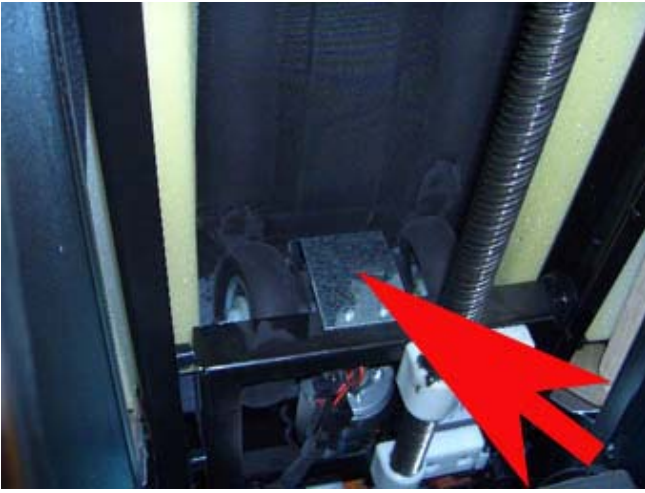

If the plate indicated by the arrow is fitted to the unit, remove it and DO NOT FIT IT BACK AGAIN.



Remove the plugs from the armrests.




Unscrew the armrests from the chair.



Undo the 5 self-tapping screws that fix the footrest to the chair.

Undo the 5 self-tapping screws that fix the

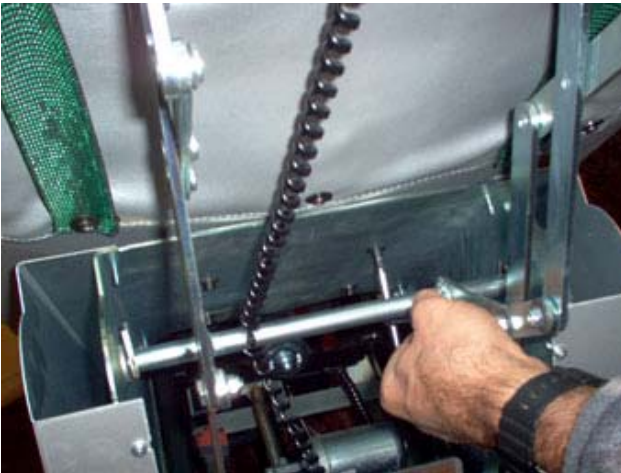

damaged chair and fit the new one.

Undo the 4 screws that fix the seat. Remove the

Repeat the same operations in the opposite order (except for picture 4) to assemble the unit again.