



pietranera[®]

arredamenti e attrezzature per parrucchieri

PIETRANERA spa Via Masaccio n° 2 Z.I Mancasale 42100 Reggio Emilia Italy
Tel 0522-516510 Fax 0522-514669 P.I. 01169000351

Replacement of 'backrest cloth' on 504M SESTO SENSO




Remove the rear metal cover.




Remove the black plastic cover, keeping the basin completely tilted backwards.



Undo the 2 self-tapping screws that fix the backrest.

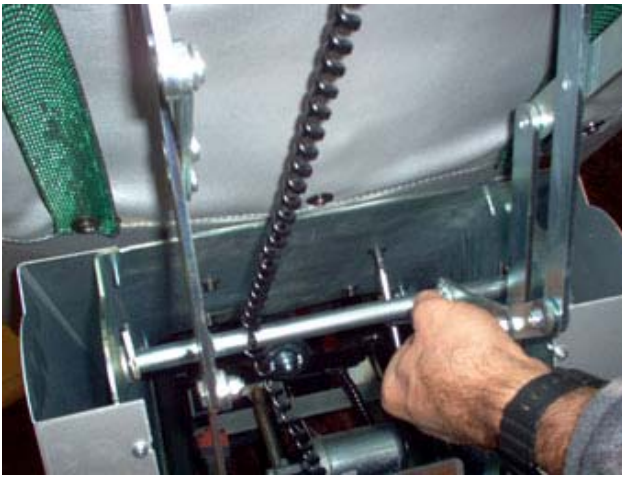

Undo the 4 screws that fix the seat.

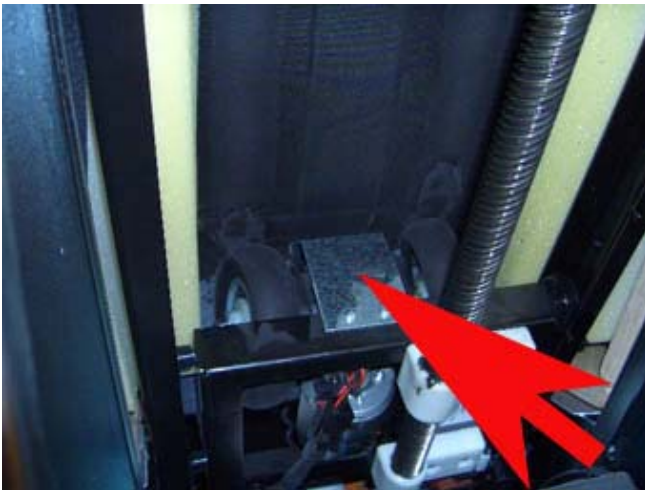

If the plate indicated by the arrow is fitted to the unit, remove it and DO NOT FIT IT BACK AGAIN.



Tilt the chair forwards by 90°.



Slide the frame with the cloth into the backrest.



Fit the frame to the chair with 2 wood screws.



Fit the cloth to the chair with 3 wood screws.

Repeat the same operations in the opposite order (except for picture 5) to assemble the unit again.